



CAJAS DE SUPERFICIE SURFACE BOXES

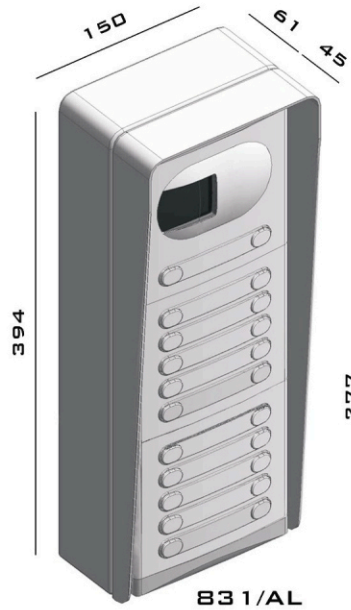


831/AL




821/AL

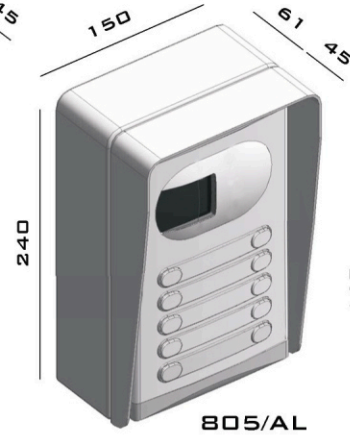

805/AL

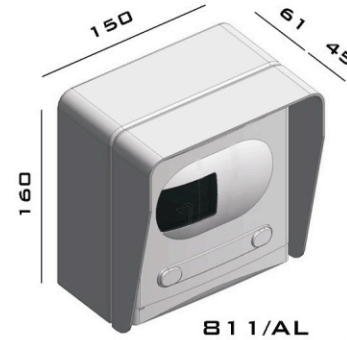


811/AL

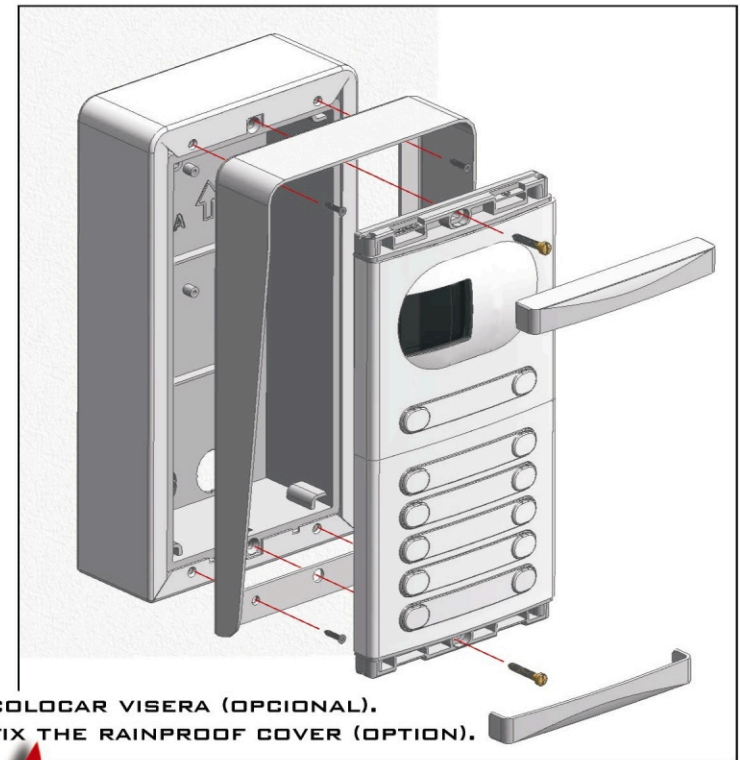


3.1.COLOCAR VISERA (OPCIONAL).
FIX THE RAINPROOF COVER (OPTION).

1.MARCAR, TALADRAR (Ø6) Y ATORNILLAR.
MARK, DRILL (Ø6) AND FIX.

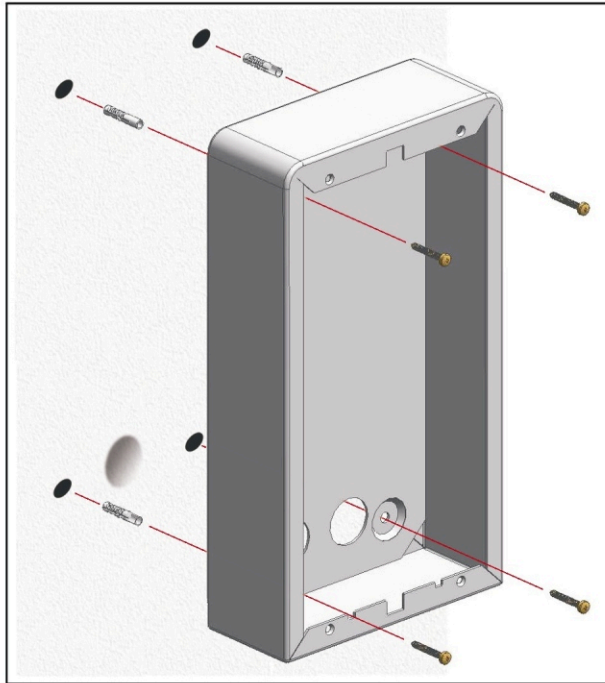

2.INTRODUCIR LA CAJA DE EMPOTRAR.
INSERT THE EMBEDDING BOX.

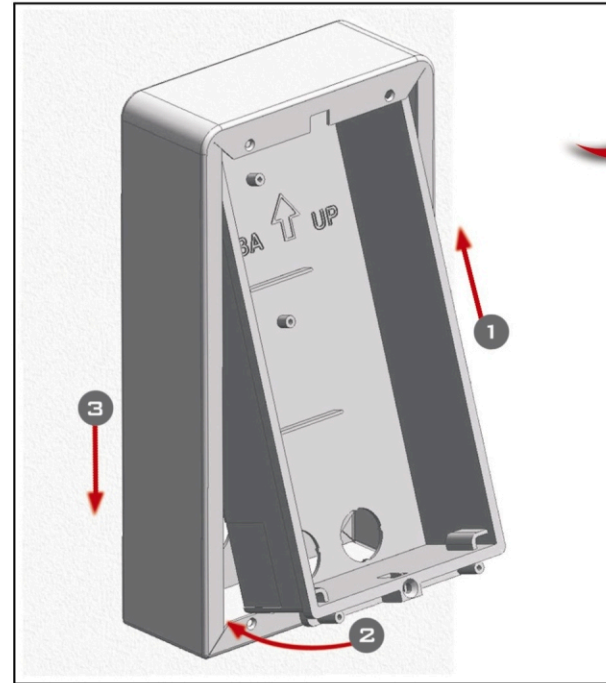

3.2.COLOCAR LA PLACA.
FIX THE PANEL.

